



**WARRANTY :** This KOOLATRON product is warranted to the retail consumer for 90 Days from date of retail purchase, against defects in material and workmanship.

**WHAT IS COVERED:** Replacement parts and labour. Transportation charges to customer for repaired product.

**WHAT IS NOT COVERED:** Transportation of the unit or component from the customer to Koolatron. Damage caused by misuse, abuse or neglect. Damage caused by an accident. This KOOLATRON product is designed for a 12 volt DC vehicle system rated at 15 amps.

**IMPLIED WARRANTIES:** Any implied warranties, including the implied warranty of merchantability are also limited to duration of 90 days from the date of retail purchase.

**WARRANTY AND SERVICE PROCEDURE:** If you have a problem with your unit or you require replacement parts, please telephone the following numbers for assistance:

1-800-265-8456 8:00 AM to 4:00 PM Eastern Standard Time

Monday through Friday

EUROPE 44-1634-297-383 The Service Advisors will advise you on the best course of action. Koolatron has Master Service Centres at the locations shown below:

All warranty work must be performed by a Koolatron Master Service Centre. Service after warranty may be obtained at a Master Service Centre or at an authorised service dealer. A complete listing will be mailed on request. Purchase Receipt is required to establish warranty eligibility.

U.S.A.	CANADA	EUROPE
Koolatron	Koolatron	Koolatron International
4330 Commerce Dr.	27 Catharine Avenue	Unit C3 Knights Park, Knight Road,
Batavia	Brantford	Strood, Rochester, Kent, ME2 2LS
New York 14021	Ontario N3T 1X5	United Kingdom

## Drive “n” Grill

## Model: 401-596 Owner’s Guide

## Drive™n™Grill SAFETY CONSIDERATIONS

Use extreme caution with this appliance as it has hot surfaces and contains hot oil and other hot liquids. This appliance generates heat and steam while cooking. To prevent burns, scalds and/or fire, proper precautions must be taken. Use a tray or other protection underneath unit to prevent spilling onto vehicle interior.

- 1) Read all instructions before use.
- 2) Keep out of reach of children.
- 3) Do not use when vehicle is in motion.
- 4) Do not use outdoors.
- 5) Do not place near hot gas, or electric burners or in oven.
- 6) Plug grill into vehicle's cigarette lighter only after vehicle has been turned on.
- 7) Caution: Hot surfaces! Use mitts or pot holders.
- 8) Caution: Some foods exude large quantities of liquids when cooking. Ensure that the drip tray is emptied as necessary.

**IMPORTANT:** This unit draws about 15 amps during operation so make sure that the circuit and fuse you are using are rated for at least 15 amps. The current used by this unit could run your battery flat in an hour or less (depending on the condition of your battery) so we recommend having your engine running during operation of the Drive™n™Grill.

### Operating Instructions:

- 1) Before using the Grill for the first time, wipe the cooking surface with a damp cloth to remove any dust.
- 2) Plug Drive™n™Grill into the vehicle's cigarette lighter and preheat unit for about 10 minutes.
- 3) Ensure drip tray is in place.
- 4) Use mitts or other hand protection to open lid.
- 5) Carefully place items to be cooked on bottom plate. Use plastic or wooden utensils to avoid scratching the cooking surface.
- 6) Close Lid and allow food to cook for desired time. Do not leave unattended.
- 7) When food has cooked for the desired time, disconnect the unit from the cigarette lighter by pulling on the power plug itself. DO NOT pull out using the cord.
- 8) Remove food using plastic or wooden utensils.

- 9) When cooled down, carefully remove and empty the Drip Tray.

**Cleaning Tips:** To make clean up a lot easier, immediately after the food is removed, place a wet rag or several layers of moist paper towels between the grilling plates as they cool down. This will moisten any baked on food such that the grill wipes clean. Use mild soap and water with cloth, brush or sponge. DO NOT use metal scouring pads.

NEVER immerse unit or cords in water or any other liquid.

Remember to preheat grill for about 10 minutes with grill closed.

Typical Cooking Times	Cooking Time	Personal Time Preference
Beef Burgers	12min.	
Grilled Cheese Sandwich	4 min.	
Turkey Burgers	10 min	
Chicken Breast Boneless, skinless	14 min.	
White Fish	7 min.	
Pork Chop (Fresh boneless)3/4" thick	9 min.	
Link Sausage	7 min.	
Beef Steak (3/4" thick)	9 min.	
Burritos	5 min.	
Ham Steak (1/2" thick)	6 min.	
Shish-ka-bob	5 min.	
Onion & Peppers (brush with olive oil)	8 min	

Frozen items require slightly longer cooking time than shown above. Food thickness and personal preferences will call for adjustment of cooking times. Write in your own desired cooking times based on your experience. Experiment, have fun and enjoy your cooking and eating experience.

**TROUBLE SHOOTING:** If unit does not heat, clean out the cigarette lighter socket and check the fuse.

**WARNING: FIRE HAZARD** During operation of this appliance the power cord must not be hindered in any way. Do not allow kinks, bunching or crossing the cord with itself. Do not put any items on top of the cord and do not pinch the cord in a door or other tight spot.